


Guide to Parts and Controls

For more information, see the pages in parentheses.

Remote

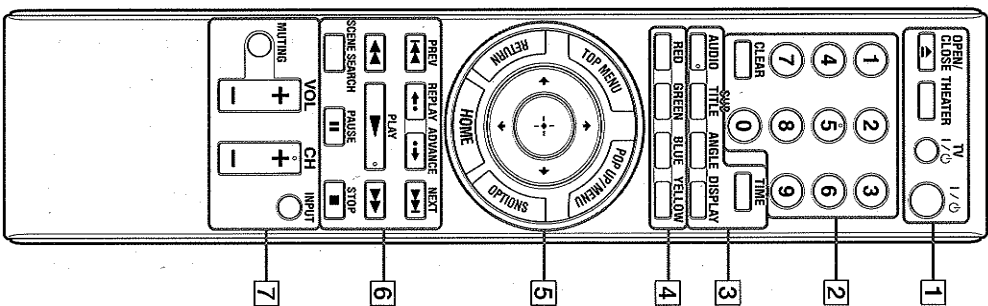

1 ▲ OPEN/CLOSE (page 30)

Opens or closes the disc tray.

THEATER (page 16)

Switches to the optimum video mode for watching movies automatically. When connected with an AV amplifier (receiver) using the HDMI cable, the speaker output also switches automatically. Press the button again to return to the original setting. When connected with a Theater Mode-compatible TV using the HDMI cable, the TV's video mode switches to Theater Mode.

⚡ The THEATER button functions only when connected to a Theater Mode-compatible TV.

TV I/O (on standby) (page 26)

Turns on the TV or sets to standby mode. I/O (on standby) (page 27) Turns on the player or sets to standby mode.

2 Number buttons (page 33, 51)

Enters the data/number, numbers, etc.

CLEAR

Clears the entry field.

3 TIME (page 11)

Displays the elapsed/remaining playback time in the front panel display. Each time you press the button, the display switches between elapsed playback time and remaining play back time.

AUDIO (page 45)

Selects the language track when multilingual tracks are recorded on BD-ROMs/DVD VIDEOS.

SUBTITLE (page 45)

Selects the subtitle language when multilingual subtitles are recorded on BD-ROMs/DVD VIDEOS.

ANGLE

Switches to other viewing angles when multi-angles are recorded on BD-ROMs/DVD VIDEOS.

DISPLAY (page 34)

Displays the playback information on the screen.

4 Color buttons (RED/GREEN/BLUE/YELLOW)

Short cut keys for selecting items on some BD's menus (can also be used for BD's Java interactive operations).

5 TOP MENU (page 32)

Opens or closes the BD's or DVD's Top Menu.

POP UP/MENU (page 32)

Opens or closes the BD-ROM's Pop-up Menu, or the DVD's menu.

OPTIONS (page 32, 37)

The options menu that can be selected appears on the screen.

HOME (page 39)

Enters or exits the player's home menu.

RETURN

Returns to the previous display.

←/↑/→

Moves the highlight to select a displayed item.

Center button (ENTER)

Enters the selected item.

6 ◀◀ PREVIOUS/▶▶ (previous/next)

Skips to the previous/next chapter, track, or file.

To go to the beginning of the previous track, press ◀◀ PREVIOUS twice.

◀◀ REPLAY/ADVANCE ▶▶

(instant replay/instant advance)

Replays the scene/briefly fast forwards the scene.

◀/▶

(fast reverse/fast forward)

Fast reverses/fast forwards the disc when pressed during playback.

Each time you press the button, search speed changes as follows**:

Playback direction
▶▶ 1 (x10) → ▶▶ 2 (x30) → ▶▶ 3 (x120)

Reverse direction

◀◀ 1 (x1) → ◀◀ 1 (x10) → ◀◀ 2 (x30) → ◀◀ 3 (x120)

When you press and hold the button, fast forward/fast reverse continues at the selected speed until you release the button.

* Search speed does not change when playing CDs.

Speed multiple values are approximate.

▶▶ To resume normal playback, press

▶▶ PLAY.

▶▶ PLAY (page 30)

Starts or re-starts playback.

Resumes playback from the point where you press ■ STOP (Resume Play).

Plays a slideshow when a disc containing JPEG image files is inserted.

SCENE SEARCH (page 33)

Switches to Scene Search mode that lets you move quickly between scenes within the title currently being played back.

⏸ PAUSE

Pauses or re-starts playback.

■ STOP

Stops playback and remembers the stop point (resume point) (page 31, 36).

The resume point for a title/track is the last point you played or the last photo for a photo folder.

7 For TV's operable with the following buttons, see page 26.

MUTING

Mutes the TV sound.

VOL (volume) +/-

Adjusts the TV volume.

CH (channel) +/-

Selects the TV channels up and down.

INPUT (input select)

Switches between TV and other input sources.

Number 5, AUDIO, CH +, and ▶▶ PLAY buttons have a tactile dot. Use the tactile dot as a reference when operating the player.