

AVR-X8500H
AVC-X8500H
Remote Code List

Ver. 01

Version	Date	Contents	Page
01	1-DE c -17	Original	

SHARP FORMAT

FORMAT: SHARP / DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED, 1=INVERTED /REMOTE ID : 1

SYSTEM ADDRESS(C1~C5) : 0 1 0 0 0 , EXTENSION BIT(C12,C13) : 1 1

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0230000	0 0 0 0 0 0		RCSHP0230016	0 0 0 0 1 0	FR LEVEL DOWN
RCSHP0230001	1 0 0 0 0 0	POWER	RCSHP0230017	1 0 0 0 1 0	
RCSHP0230002	0 1 0 0 0 0	FL LEVEL UP	RCSHP0230018	0 1 0 0 1 0	
RCSHP0230003	1 1 0 0 0 0	PHONO	RCSHP0230019	1 1 0 0 1 0	
RCSHP0230004	0 0 1 0 0 0	CD	RCSHP0230020	0 0 1 0 1 0	
RCSHP0230005	1 0 1 0 0 0	TUNER	RCSHP0230021	1 0 1 0 1 0	
RCSHP0230006	0 1 1 0 0 0		RCSHP0230022	0 1 1 0 1 0	SR LEVEL UP
RCSHP0230007	1 1 1 0 0 0	FL LEVEL DOWN	RCSHP0230023	1 1 1 0 1 0	SR LEVEL DOWN
RCSHP0230008	0 0 0 1 0 0	CBL/SAT	RCSHP0230024	0 0 0 1 1 0	VIDEO SELECT
RCSHP0230009	1 0 0 1 0 0	TV AUDIO	RCSHP0230025	1 0 0 1 1 0	
RCSHP0230010	0 1 0 1 0 0	Blu-ray	RCSHP0230026	0 1 0 1 1 0	
RCSHP0230011	1 1 0 1 0 0	FR LEVEL UP	RCSHP0230027	1 1 0 1 1 0	
RCSHP0230012	0 0 1 1 0 0	AUX1	RCSHP0230028	0 0 1 1 1 0	INPUT MODE ANALOG
RCSHP0230013	1 0 1 1 0 0	GAME	RCSHP0230029	1 0 1 1 1 0	CURSOR RIGHT
RCSHP0230014	0 1 1 1 0 0	MEDIA PLAYER	RCSHP0230030	0 1 1 1 1 0	STATUS
RCSHP0230015	1 1 1 1 0 0		RCSHP0230031	1 1 1 1 1 0	INFO

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0230032	0 0 0 0 0 1	ENTER	RCSHP0230048	0 0 0 0 1 1	MUTING
RCSHP0230033	1 0 0 0 0 1	POWER ON	RCSHP0230049	1 0 0 0 1 1	MASTER VOLUME UP
RCSHP0230034	0 1 0 0 0 1	POWER OFF	RCSHP0230050	0 1 0 0 1 1	MASTER VOLUME DOWN
RCSHP0230035	1 1 0 0 0 1	DVD	RCSHP0230051	1 1 0 0 1 1	SL LEVEL UP
RCSHP0230036	0 0 1 0 0 1	STANDARD(DOLBY/DTS SURR.)	RCSHP0230052	0 0 1 0 1 1	SL LEVEL DOWN
RCSHP0230037	1 0 1 0 0 1	SW LEVEL DOWN	RCSHP0230053	1 0 1 0 1 1	CENTER LEVEL UP
RCSHP0230038	0 1 1 0 0 1	DSP SIMULATION	RCSHP0230054	0 1 1 0 1 1	CENTER LEVEL DOWN
RCSHP0230039	1 1 1 0 0 1	SB/SBL LEVEL UP	RCSHP0230055	1 1 1 0 1 1	SBR LEVEL UP
RCSHP0230040	0 0 0 1 0 1		RCSHP0230056	0 0 0 1 1 1	SBR LEVEL DOWN
RCSHP0230041	1 0 0 1 0 1		RCSHP0230057	1 0 0 1 1 1	TONE CONTROL OFF
RCSHP0230042	0 1 0 1 0 1		RCSHP0230058	0 1 0 1 1 1	TONE CONTROL ON
RCSHP0230043	1 1 0 1 0 1	SB/SBL LEVEL DOWN	RCSHP0230059	1 1 0 1 1 1	
RCSHP0230044	0 0 1 1 0 1	SW LEVEL UP	RCSHP0230060	0 0 1 1 1 1	
RCSHP0230045	1 0 1 1 0 1	FRONT SPEAKER	RCSHP0230061	1 0 1 1 1 1	
RCSHP0230046	0 1 1 1 0 1	SP-A ,FRONT	RCSHP0230062	0 1 1 1 1 1	

RCSHP02300 47	1 1 1 1 0 1	SP-B ,FRONT	RCSHP02300 63	1 1 1 1 1 1	
----------------------	-------------	-------------	----------------------	-------------	--

FORMAT: SHARP / DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED, 1=INVERTED /REMOTE ID : 1

SYSTEM ADDRESS(C1~C5) : 0 0 1 1 0 , EXTENSION BIT (C12,C13) : 0 1

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0C20000	0 0 0 0 0 0	ALL BASS DOWN	RCSHP0C20016	0 0 0 0 1 0	ZONE2 CD
RCSHP0C20001	1 0 0 0 0 0		RCSHP0C20017	1 0 0 0 1 0	ZONE2 TUNER
RCSHP0C20002	0 1 0 0 0 0	SURROUND BACK	RCSHP0C20018	0 1 0 0 1 0	ZONE2 Blu-ray
RCSHP0C20003	1 1 0 0 0 0	MASTER VOL. PRESET1(0dB)	RCSHP0C20019	1 1 0 0 1 0	ZONE2 AUX1
RCSHP0C20004	0 0 1 0 0 0		RCSHP0C20020	0 0 1 0 1 0	ZONE2 GAME
RCSHP0C20005	1 0 1 0 0 0	MASTER VOL. PRESET2(-20dB)	RCSHP0C20021	1 0 1 0 1 0	
RCSHP0C20006	0 1 1 0 0 0	MASTER VOL. PRESET3(-40dB)	RCSHP0C20022	0 1 1 0 1 0	ZONE2 PRESET UP
RCSHP0C20007	1 1 1 0 0 0	ZONE2 VOL. PRESET1(0dB)	RCSHP0C20023	1 1 1 0 1 0	ZONE2 PRESET DOWN
RCSHP0C20008	0 0 0 1 0 0	ZONE2 VOL. PRESET2(-20dB)	RCSHP0C20024	0 0 0 1 1 0	
RCSHP0C20009	1 0 0 1 0 0	ZONE2 VOL. PRESET3(-40dB)	RCSHP0C20025	1 0 0 1 1 0	ZONE2 MEDIA PLAYER
RCSHP0C20010	0 1 0 1 0 0	ZONE2 CBL/SAT	RCSHP0C20026	0 1 0 1 1 0	
RCSHP0C20011	1 1 0 1 0 0		RCSHP0C20027	1 1 0 1 1 0	ZONE2 TV AUDIO
RCSHP0C20012	0 0 1 1 0 0	ZONE3 VOL. PRESET1(0dB)	RCSHP0C20028	0 0 1 1 1 0	
RCSHP0C20013	1 0 1 1 0 0	ZONE2 VOLUME UP	RCSHP0C20029	1 0 1 1 1 0	STEREO
RCSHP0C20014	0 1 1 1 0 0	ZONE2 VOLUME DOWN	RCSHP0C20030	0 1 1 1 1 0	DIRECT
RCSHP0C20015	1 1 1 1 0 0	ZONE2 PHONO	RCSHP0C20031	1 1 1 1 1 0	ZONE3 VOL. PRESET2(0dB)

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0C20032	0 0 0 0 0 1	SETUP MENU	RCSHP0C20048	0 0 0 0 1 1	
RCSHP0C20033	1 0 0 0 0 1		RCSHP0C20049	1 0 0 0 1 1	
RCSHP0C20034	0 1 0 0 0 1	ZONE3 VOL. PRESET2(0dB)	RCSHP0C20050	0 1 0 0 1 1	
RCSHP0C20035	1 1 0 0 0 1	CURSOR UP	RCSHP0C20051	1 1 0 0 1 1	
RCSHP0C20036	0 0 1 0 0 1	CURSOR DOWN	RCSHP0C20052	0 0 1 0 1 1	
RCSHP0C20037	1 0 1 0 0 1		RCSHP0C20053	1 0 1 0 1 1	
RCSHP0C20038	0 1 1 0 0 1		RCSHP0C20054	0 1 1 0 1 1	INPUT MODE
RCSHP0C20039	1 1 1 0 0 1		RCSHP0C20055	1 1 1 0 1 1	ALL TREBLE UP
RCSHP0C20040	0 0 0 1 0 1	MULTI CH STEREO	RCSHP0C20056	0 0 0 1 1 1	ALL TREBLE DOWN
RCSHP0C20041	1 0 0 1 0 1		RCSHP0C20057	1 0 0 1 1 1	
RCSHP0C20042	0 1 0 1 0 1		RCSHP0C20058	0 1 0 1 1 1	
RCSHP0C20043	1 1 0 1 0 1		RCSHP0C20059	1 1 0 1 1 1	
RCSHP0C20044	0 0 1 1 0 1		RCSHP0C20060	0 0 1 1 1 1	
RCSHP0C20045	1 0 1 1 0 1		RCSHP0C20061	1 0 1 1 1 1	
RCSHP0C20046	0 1 1 1 0 1		RCSHP0C20062	0 1 1 1 1 1	ZONE2 DVD
RCSHP0C20047	1 1 1 1 0 1	CH LEVEL	RCSHP0C20063	1 1 1 1 1 1	ALL BASS UP

FORMAT: SHARP / DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED, 1=INVERTED /REMOTE ID : 1

SYSTEM ADDRESS(C1~C5) : 0 0 1 1 0 , EXTENSION BIT (C12,C13) : 1 0

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0C10032	0 0 0 0 0 1		RCSHP0C10048	0 0 0 0 1 1	
RCSHP0C10033	1 0 0 0 0 1		RCSHP0C10049	1 0 0 0 1 1	
RCSHP0C10034	0 1 0 0 0 1		RCSHP0C10050	0 1 0 0 1 1	
RCSHP0C10035	1 1 0 0 0 1		RCSHP0C10051	1 1 0 0 1 1	
RCSHP0C10036	0 0 1 0 0 1		RCSHP0C10052	0 0 1 0 1 1	
RCSHP0C10037	1 0 1 0 0 1		RCSHP0C10053	1 0 1 0 1 1	
RCSHP0C10038	0 1 1 0 0 1		RCSHP0C10054	0 1 1 0 1 1	
RCSHP0C10039	1 1 1 0 0 1		RCSHP0C10055	1 1 1 0 1 1	
RCSHP0C10040	0 0 0 1 0 1		RCSHP0C10056	0 0 0 1 1 1	
RCSHP0C10041	1 0 0 1 0 1		RCSHP0C10057	1 0 0 1 1 1	
RCSHP0C10042	0 1 0 1 0 1		RCSHP0C10058	0 1 0 1 1 1	
RCSHP0C10043	1 1 0 1 0 1		RCSHP0C10059	1 1 0 1 1 1	
RCSHP0C10044	0 0 1 1 0 1		RCSHP0C10060	0 0 1 1 1 1	
RCSHP0C10045	1 0 1 1 0 1		RCSHP0C10061	1 0 1 1 1 1	
RCSHP0C10046	0 1 1 1 0 1		RCSHP0C10062	0 1 1 1 1 1	
RCSHP0C10047	1 1 1 1 0 1		RCSHP0C10063	1 1 1 1 1 1	CURSOR LEFT

FORMAT: SHARP / DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED, 1=INVERTED /REMOTE ID : 1

SYSTEM ADDRESS(C1~C5) : 0 0 1 1 0 , EXTENSION BIT (C12,C13) : 1 1

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0C30000	0 0 0 0 0 0		RCSHP0C30016	0 0 0 0 1 0	
RCSHP0C30001	1 0 0 0 0 0	1 ※NA only	RCSHP0C30017	1 0 0 0 1 0	
RCSHP0C30002	0 1 0 0 0 0	2 ※NA only	RCSHP0C30018	0 1 0 0 1 0	DIRECT SEARCH ※NA only
RCSHP0C30003	1 1 0 0 0 0	3 ※NA only	RCSHP0C30019	1 1 0 0 1 0	
RCSHP0C30004	0 0 1 0 0 0	4 ※NA only	RCSHP0C30020	0 0 1 0 1 0	PTY ※EU only
RCSHP0C30005	1 0 1 0 0 0	5 ※NA only	RCSHP0C30021	1 0 1 0 1 0	TUNER PRESET DOWN ※NA only
RCSHP0C30006	0 1 1 0 0 0	6 ※NA only	RCSHP0C30022	0 1 1 0 1 0	TUNER PRESET UP ※NA only
RCSHP0C30007	1 1 1 0 0 0	7 ※NA only	RCSHP0C30023	1 1 1 0 1 0	TUNER BAND ※NA only
RCSHP0C30008	0 0 0 1 0 0	8 ※NA only	RCSHP0C30024	0 0 0 1 1 0	TUNER TUNING MODE ※NA only
RCSHP0C30009	1 0 0 1 0 0	9 ※NA only	RCSHP0C30025	1 0 0 1 1 0	TUNER TUNING UP ※NA only
RCSHP0C30010	0 1 0 1 0 0	0 ※NA only	RCSHP0C30026	0 1 0 1 1 0	TUNER TUNING DOWN ※NA only
RCSHP0C30011	1 1 0 1 0 0		RCSHP0C30027	1 1 0 1 1 0	
RCSHP0C30012	0 0 1 1 0 0	TUNER MEMORY ※NA only	RCSHP0C30028	0 0 1 1 1 0	
RCSHP0C30013	1 0 1 1 0 0		RCSHP0C30029	1 0 1 1 1 0	
RCSHP0C30014	0 1 1 1 0 0	RT ※EU only	RCSHP0C30030	0 1 1 1 1 0	
RCSHP0C30015	1 1 1 1 0 0		RCSHP0C30031	1 1 1 1 1 0	DIMMER

FORMAT: SHARP / DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED, 1=INVERTED /REMOTE ID : 1

SYSTEM ADDRESS (C1~C5) : 0 1 0 0 0 , EXTENSION BIT (C12,C13) : 1 0

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0210000	0 0 0 0 0 0		RCSHP0210016	0 0 0 0 1 0	
RCSHP0210001	1 0 0 0 0 0		RCSHP0210017	1 0 0 0 1 0	
RCSHP0210002	0 1 0 0 0 0		RCSHP0210018	0 1 0 0 1 0	ZONE3 TV AUDIO
RCSHP0210003	1 1 0 0 0 0		RCSHP0210019	1 1 0 0 1 0	ZONE3 CBL/SAT
RCSHP0210004	0 0 1 0 0 0		RCSHP0210020	0 0 1 0 1 0	ZONE3 GAME
RCSHP0210005	1 0 1 0 0 0		RCSHP0210021	1 0 1 0 1 0	ZONE3 MEDIAPLAYER
RCSHP0210006	0 1 1 0 0 0		RCSHP0210022	0 1 1 0 1 0	
RCSHP0210007	1 1 1 0 0 0		RCSHP0210023	1 1 1 0 1 0	ZONE3 AUX1
RCSHP0210008	0 0 0 1 0 0	ZONE3 TUNER	RCSHP0210024	0 0 0 1 1 0	
RCSHP0210009	1 0 0 1 0 0	ZONE3 PHONO	RCSHP0210025	1 0 0 1 1 0	
RCSHP0210010	0 1 0 1 0 0	ZONE3 CD	RCSHP0210026	0 1 0 1 1 0	
RCSHP0210011	1 1 0 1 0 0		RCSHP0210027	1 1 0 1 1 0	
RCSHP0210012	0 0 1 1 0 0		RCSHP0210028	0 0 1 1 1 0	
RCSHP0210013	1 0 1 1 0 0		RCSHP0210029	1 0 1 1 1 0	ZONE2 ON/OFF
RCSHP0210014	0 1 1 1 0 0	ZONE3 DVD	RCSHP0210030	0 1 1 1 1 0	
RCSHP0210015	1 1 1 1 0 0	ZONE3 Blu-ray	RCSHP0210031	1 1 1 1 1 0	

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0210032	0 0 0 0 0 1		RCSHP0210048	0 0 0 0 1 1	
RCSHP0210033	1 0 0 0 0 1		RCSHP0210049	1 0 0 0 1 1	
RCSHP0210034	0 1 0 0 0 1		RCSHP0210050	0 1 0 0 1 1	
RCSHP0210035	1 1 0 0 0 1		RCSHP0210051	1 1 0 0 1 1	
RCSHP0210036	0 0 1 0 0 1		RCSHP0210052	0 0 1 0 1 1	
RCSHP0210037	1 0 1 0 0 1	ZONE3 VOLUME DOWN	RCSHP0210053	1 0 1 0 1 1	
RCSHP0210038	0 1 1 0 0 1	ZONE3 VOLUME UP	RCSHP0210054	0 1 1 0 1 1	
RCSHP0210039	1 1 1 0 0 1		RCSHP0210055	1 1 1 0 1 1	
RCSHP0210040	0 0 0 1 0 1		RCSHP0210056	0 0 0 1 1 1	
RCSHP0210041	1 0 0 1 0 1		RCSHP0210057	1 0 0 1 1 1	MAIN ZONE ON
RCSHP0210042	0 1 0 1 0 1	PURE DIRECT	RCSHP0210058	0 1 0 1 1 1	MAIN ZONE OFF
RCSHP0210043	1 1 0 1 0 1		RCSHP0210059	1 1 0 1 1 1	ZONE2 ON
RCSHP0210044	0 0 1 1 0 1		RCSHP0210060	0 0 1 1 1 1	ZONE2 OFF
RCSHP0210045	1 0 1 1 0 1		RCSHP0210061	1 0 1 1 1 1	ZONE3 ON
RCSHP0210046	0 1 1 1 0 1		RCSHP0210062	0 1 1 1 1 1	ZONE3 OFF
RCSHP0210047	1 1 1 1 0 1		RCSHP0210063	1 1 1 1 1 1	

FORMAT: SHARP / DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED, 1=INVERTED /REMOTE ID : 1

SYSTEM ADDRESS (C1~C5) : 0 0 1 0 0 , EXTENSION BIT (C12,C13) : 0 1

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0420000	0 0 0 0 0 0		RCSHP0420016	0 0 0 0 1 0	
RCSHP0420001	1 0 0 0 0 0		RCSHP0420017	1 0 0 0 1 0	
RCSHP0420002	0 1 0 0 0 0		RCSHP0420018	0 1 0 0 1 0	
RCSHP0420003	1 1 0 0 0 0	ROCK ARENA	RCSHP0420019	1 1 0 0 1 0	
RCSHP0420004	0 0 1 0 0 0	JAZZ CLUB	RCSHP0420020	0 0 1 0 1 0	
RCSHP0420005	1 0 1 0 0 0		RCSHP0420021	1 0 1 0 1 0	
RCSHP0420006	0 1 1 0 0 0	MONO MOVIE	RCSHP0420022	0 1 1 0 1 0	
RCSHP0420007	1 1 1 0 0 0	MATRIX	RCSHP0420023	1 1 1 0 1 0	
RCSHP0420008	0 0 0 1 0 0	VIDEO GAME	RCSHP0420024	0 0 0 1 1 0	
RCSHP0420009	1 0 0 1 0 0	VIRTUAL	RCSHP0420025	1 0 0 1 1 0	
RCSHP0420010	0 1 0 1 0 0		RCSHP0420026	0 1 0 1 1 0	
RCSHP0420011	1 1 0 1 0 0		RCSHP0420027	1 1 0 1 1 0	
RCSHP0420012	0 0 1 1 0 0		RCSHP0420028	0 0 1 1 1 0	
RCSHP0420013	1 0 1 1 0 0		RCSHP0420029	1 0 1 1 1 0	MultEQ XT32
RCSHP0420014	0 1 1 1 0 0		RCSHP0420030	0 1 1 1 1 0	
RCSHP0420015	1 1 1 1 0 0		RCSHP0420031	1 1 1 1 1 0	

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0420032	0 0 0 0 0 1		RCSHP0420048	0 0 0 0 1 1	
RCSHP0420033	1 0 0 0 0 1		RCSHP0420049	1 0 0 0 1 1	
RCSHP0420034	0 1 0 0 0 1		RCSHP0420050	0 1 0 0 1 1	
RCSHP0420035	1 1 0 0 0 1		RCSHP0420051	1 1 0 0 1 1	INPUT MDOE AUTO
RCSHP0420036	0 0 1 0 0 1		RCSHP0420052	0 0 1 0 1 1	
RCSHP0420037	1 0 1 0 0 1		RCSHP0420053	1 0 1 0 1 1	
RCSHP0420038	0 1 1 0 0 1		RCSHP0420054	0 1 1 0 1 1	
RCSHP0420039	1 1 1 0 0 1		RCSHP0420055	1 1 1 0 1 1	INPUT MODE: EXT IN
RCSHP0420040	0 0 0 1 0 1		RCSHP0420056	0 0 0 1 1 1	
RCSHP0420041	1 0 0 1 0 1		RCSHP0420057	1 0 0 1 1 1	
RCSHP0420042	0 1 0 1 0 1		RCSHP0420058	0 1 0 1 1 1	
RCSHP0420043	1 1 0 1 0 1		RCSHP0420059	1 1 0 1 1 1	
RCSHP0420044	0 0 1 1 0 1		RCSHP0420060	0 0 1 1 1 1	
RCSHP0420045	1 0 1 1 0 1		RCSHP0420061	1 0 1 1 1 1	
RCSHP0420046	0 1 1 1 0 1		RCSHP0420062	0 1 1 1 1 1	
RCSHP0420047	1 1 1 1 0 1		RCSHP0420063	1 1 1 1 1 1	

FORMAT KASEIKYO**DATA CONSTRUCTION 48bits**

DENON CODE																Parity				GENRE1(*1)			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	*	*	*	*
GENRE2(*2)				Data								ID(*3)				Parity(*5)							
25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*

(*5) Parity :

Delimit of each to 8 bits, and add the 3rd byte and the 4th byte and the 5th byte with modulo 2(exclusive-OR).

3rd byte (17 - 24 bit)

4th byte (25 - 32 bit)

5th byte (33 - 40 bit)

REMOTE ID SETTING: (default ID 1)

ID No.	ZONE/DEVICE	GENRE1(*1)				GENRE2(*2)				ID(*3)		
		21	22	23	24	25	26	27	28	39	40	
1	MAIN ZONE	0	0	1	0	1	0	0	0	0	0	SHARP&K4-1
	ZONE2	0	0	1	0	1	1	0	0	0	0	SHARP&K4-3
	ZONE3	0	0	1	0	1	0	1	0	0	0	SHARP&K4-5
	TUNER	0	0	1	0	1	0	0	0	0	0	SHARP&K4-1
	HEOS MUSIC	0	0	1	0	1	1	1	0	0	0	K4-7
2	MAIN ZONE	0	0	1	0	0	1	0	0	1	0	K4-2
	ZONE2	0	0	1	0	0	0	1	0	1	0	K4-4
	ZONE3	0	0	1	0	0	1	1	0	1	0	K4-6
	TUNER	0	0	1	0	0	1	0	0	1	0	K4-2
	HEOS MUSIC	0	0	1	0	0	0	0	1	1	0	K4-8
3	MAIN ZONE	0	0	1	0	0	1	0	0	0	1	K4-2
	ZONE2	0	0	1	0	0	0	1	0	0	1	K4-4
	ZONE3	0	0	1	0	0	1	1	0	0	1	K4-6
	TUNER	0	0	1	0	0	1	0	0	0	1	K4-2
	HEOS MUSIC	0	0	1	0	0	0	0	1	0	1	K4-8
4	MAIN ZONE	0	0	1	0	0	1	0	0	1	1	K4-2
	ZONE2	0	0	1	0	0	0	1	0	1	1	K4-4
	ZONE3	0	0	1	0	0	1	1	0	0	1	K4-6
	TUNER	0	0	1	0	0	1	0	0	1	1	K4-2
	HEOS MUSIC	0	0	1	0	0	0	0	1	1	1	K4-8

MAIN ZONE

REMOTE ID SET: 1

DENON CODE								Parity				GENRE1				GENRE2			
4				5				2				3				0			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0

REMOTE ID SET: 2-4

DENON CODE								Parity				GENRE1				GENRE2			
4				5				2				3				0			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0

No.	Data										ID		parity								Key Name
	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	
RCKSK0410001	1	0	0	0	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ALL POWER ON/OFF
RCKSK0410002	0	1	0	0	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ALL POWER ON
RCKSK0410003	1	1	0	0	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ALL POWER OFF
RCKSK0410006	0	1	1	0	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	MAIN ZONE ON
RCKSK0410007	1	1	1	0	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	MAIN ZONE OFF
RCKSK0410012	0	0	1	1	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	TRIGGER-1 ON
RCKSK0410013	1	0	1	1	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	TRIGGER-1 OFF
RCKSK0410014	0	1	1	1	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	TRIGGER-2 ON
RCKSK0410015	1	1	1	1	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	TRIGGER-2 OFF
RCKSK0410016	0	0	0	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	KEY1
RCKSK0410017	1	0	0	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	KEY2
RCKSK0410018	0	1	0	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	KEY3
RCKSK0410019	1	1	0	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	KEY4
RCKSK0410020	0	0	1	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	KEY5
RCKSK0410021	1	0	1	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	KEY6
RCKSK0410022	0	1	1	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	KEY7
RCKSK0410023	1	1	1	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	KEY8
RCKSK0410024	0	0	0	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	KEY9
RCKSK0410025	1	0	0	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	KEY0
RCKSK0410027	1	1	0	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	CURSOR UP
RCKSK0410028	0	0	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	CURSOR DOWN
RCKSK0410029	1	0	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	CURSOR LEFT

RCKSK0410030	0	1	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	CURSOR RIGHT
RCKSK0410031	1	1	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ENTER
RCKSK0410034	0	1	0	0	0	1	0	0	0	0	*	*	*	*	*	*	*	*	*	*	RETURN/BACK
RCKSK0410035	1	1	0	0	0	1	0	0	0	0	*	*	*	*	*	*	*	*	*	*	SETUP MENU
RCKSK0410036	0	0	1	0	0	1	0	0	0	0	*	*	*	*	*	*	*	*	*	*	MEMORY
RCKSK0410042	0	1	0	1	0	1	0	0	0	0	*	*	*	*	*	*	*	*	*	*	UPGRADE ID ON
RCKSK0410045	1	0	1	1	0	1	0	0	0	0	*	*	*	*	*	*	*	*	*	*	Bilingual Mode(toggle) (JP only)
RCKSK0410112	0	0	0	0	1	1	1	0	0	0	*	*	*	*	*	*	*	*	*	*	VIDEO SELECT
RCKSK0410223	1	1	1	1	1	0	1	1	0	0	*	*	*	*	*	*	*	*	*	*	AUX3 (Additional Source)
RCKSK0410224	0	0	0	0	0	1	1	1	0	0	*	*	*	*	*	*	*	*	*	*	AUX4 (Additional Source)
RCKSK0410225	1	0	0	0	0	1	1	1	0	0	*	*	*	*	*	*	*	*	*	*	AUX5 (Additional Source)
RCKSK0410226	0	1	0	0	0	1	1	1	0	0	*	*	*	*	*	*	*	*	*	*	AUX6 (Additional Source)
RCKSK0410227	1	1	0	0	0	1	1	1	0	0	*	*	*	*	*	*	*	*	*	*	AUX7 (Additional Source)
RCKSK0410292	0	0	1	0	0	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	QUICK SELECT 1
RCKSK0410293	1	0	1	0	0	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	QUICK SELECT 2
RCKSK0410294	0	1	1	0	0	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	QUICK SELECT 3
RCKSK0410295	1	1	1	0	0	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	QUICK SELECT 4
RCKSK0410296	0	0	0	1	0	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	QUICK SELECT 5
RCKSK0410304	0	0	0	0	1	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	STEREO
RCKSK0410305	1	0	0	0	1	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	DIRECT/STEREO
RCKSK0410306	0	1	0	0	1	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	DIRECT
RCKSK0410307	1	1	0	0	1	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	PURE DIRECT
RCKSK0410308	0	0	1	0	1	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	STANDARD
RCKSK0410309	1	0	1	0	1	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	DIRECT
RCKSK0410320	0	0	0	0	0	0	1	0	1	0	*	*	*	*	*	*	*	*	*	*	DTS SURROUND
RCKSK0410324	0	0	1	0	0	0	1	0	1	0	*	*	*	*	*	*	*	*	*	*	AUTO SOUND
RCKSK0410329	1	0	0	1	0	0	1	0	1	0	*	*	*	*	*	*	*	*	*	*	MOVIE SURROUND
RCKSK0410330	0	1	0	1	0	0	1	0	1	0	*	*	*	*	*	*	*	*	*	*	MUSIC SURROUND
RCKSK0410331	1	1	0	1	0	0	1	0	1	0	*	*	*	*	*	*	*	*	*	*	GAME SURROUND
RCKSK0410332	0	0	1	1	0	0	1	0	1	0	*	*	*	*	*	*	*	*	*	*	SURROUND MODE toggle(Reverse)
RCKSK0410336	0	0	0	0	1	0	1	0	1	0	*	*	*	*	*	*	*	*	*	*	DSP SIMULATION
RCKSK0410337	1	0	0	0	1	0	1	0	1	0	*	*	*	*	*	*	*	*	*	*	MULTI CH STEREO
RCKSK0410340	0	0	1	0	1	0	1	0	1	0	*	*	*	*	*	*	*	*	*	*	ROCK ARENA
RCKSK0410341	1	0	1	0	1	0	1	0	1	0	*	*	*	*	*	*	*	*	*	*	JAZZ CLUB
RCKSK0410343	1	1	1	0	1	0	1	0	1	0	*	*	*	*	*	*	*	*	*	*	MONO MOVIE
RCKSK0410344	0	0	0	1	1	0	1	0	1	0	*	*	*	*	*	*	*	*	*	*	MATRIX
RCKSK0410345	1	0	0	1	1	0	1	0	1	0	*	*	*	*	*	*	*	*	*	*	VIDEO GAME
RCKSK0410346	0	1	0	1	1	0	1	0	1	0	*	*	*	*	*	*	*	*	*	*	VIRTUAL
RCKSK0410348	0	0	1	1	1	0	1	0	1	0	*	*	*	*	*	*	*	*	*	*	Dolby Atmos ON/OFF
RCKSK0410349	1	0	1	1	1	0	1	0	1	0	*	*	*	*	*	*	*	*	*	*	SURROUND MODE toggle(Normal)
RCKSK0410352	0	0	0	0	0	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	INPUT MODE SELECT

RCKSK0410353	1	0	0	0	0	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	INPUT MODE:ANALOG
RCKSK0410357	1	0	1	0	0	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	INPUT MODE HDMI
RCKSK0410358	0	1	1	0	0	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	INPUT MODE:AUTO
RCKSK0410359	1	1	1	0	0	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	INPUT MODE DIGITAL
RCKSK0410361	1	0	0	1	0	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	INPUT MODE 7.1CH IN
RCKSK0410368	0	0	0	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	Volume Up
RCKSK0410369	1	0	0	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	Volume Down
RCKSK0410370	0	1	0	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	Mute
RCKSK0410372	0	0	1	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	M.VR PRESET1(0dB)
RCKSK0410373	1	0	1	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	M.VR PRESET2(-20dB)
RCKSK0410374	0	1	1	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	M.VR PRESET3(-40dB)
RCKSK0410378	0	1	0	1	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	CHANNEL LEVEL
RCKSK0410384	0	0	0	0	0	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	FL LEVEL UP
RCKSK0410385	1	0	0	0	0	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	FL LEVEL DOWN
RCKSK0410386	0	1	0	0	0	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	FR LEVEL UP
RCKSK0410387	1	1	0	0	0	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	FR LEVEL DOWN
RCKSK0410388	0	0	1	0	0	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	C LEVEL UP
RCKSK0410389	1	0	1	0	0	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	C LEVEL DOWN
RCKSK0410390	0	1	1	0	0	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	SW1 LEVEL UP
RCKSK0410391	1	1	1	0	0	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	SW1 LEVEL DOWN
RCKSK0410392	0	0	0	1	0	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	SL LEVEL UP
RCKSK0410393	1	0	0	1	0	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	SL LEVEL DOWN
RCKSK0410394	0	1	0	1	0	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	SR LEVEL UP
RCKSK0410395	1	1	0	1	0	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	SR LEVEL DOWN
RCKSK0410396	0	0	1	1	0	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	SBL LEVEL UP
RCKSK0410397	1	0	1	1	0	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	SBL LEVEL DOWN
RCKSK0410398	0	1	1	1	0	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	SBR LEVEL UP
RCKSK0410399	1	1	1	1	0	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	SBR LEVEL DOWN
RCKSK0410400	0	0	0	0	1	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	ALL TREBLE UP
RCKSK0410401	1	0	0	0	1	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	ALL TREBLE DOWN
RCKSK0410403	1	1	0	0	1	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	ALL BASS UP
RCKSK0410404	0	0	1	0	1	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	ALL BASS DOWN
RCKSK0410406	0	1	1	0	1	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	TONE CONTROL ON/OFF
RCKSK0410407	1	1	1	0	1	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	TONE CONTROL OFF
RCKSK0410408	0	0	0	1	1	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	TONE CONTROL ON
RCKSK0410410	0	1	0	1	1	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	SW2 LEVEL UP
RCKSK0410411	1	1	0	1	1	0	0	1	1	0	*	*	*	*	*	*	*	*	*	*	SW2 LEVEL DOWN
RCKSK0410417	1	0	0	0	0	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	TFL LEVEL UP
RCKSK0410418	0	1	0	0	0	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	TFL LEVEL DOWN
RCKSK0410419	1	1	0	0	0	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	TFR LEVEL UP
RCKSK0410420	0	0	1	0	0	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	TFR LEVEL DOWN

RCKSK0410421	1	0	1	0	0	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	TML LEVEL UP
RCKSK0410422	0	1	1	0	0	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	TML LEVEL DOWN
RCKSK0410423	1	1	1	0	0	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	TMR LEVEL UP
RCKSK0410424	0	0	0	1	0	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	TMR LEVEL DOWN
RCKSK0410425	1	0	0	1	0	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	TRL LEVEL UP
RCKSK0410426	0	1	0	1	0	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	TRL LEVEL DOWN
RCKSK0410427	1	1	0	1	0	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	TRR LEVEL UP
RCKSK0410428	0	0	1	1	0	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	TRR LEVEL DOWN
RCKSK0410429	1	0	1	1	0	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	RHL LEVEL UP
RCKSK0410430	0	1	1	1	0	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	RHL LEVEL DOWN
RCKSK0410431	1	1	1	1	0	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	RHR LEVEL UP
RCKSK0410432	0	0	0	0	1	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	RHR LEVEL DOWN
RCKSK0410433	1	0	0	0	1	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	FDL LEVEL UP
RCKSK0410434	0	1	0	0	1	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	FDL LEVEL DOWN
RCKSK0410435	1	1	0	0	1	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	FDR LEVEL UP
RCKSK0410436	0	0	1	0	1	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	FDR LEVEL DOWN
RCKSK0410437	1	0	1	0	1	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	SDL LEVEL UP
RCKSK0410438	0	1	1	0	1	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	SDL LEVEL DOWN
RCKSK0410439	1	1	1	0	1	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	SDR LEVEL UP
RCKSK0410440	0	0	0	1	1	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	SDR LEVEL DOWN
RCKSK0410441	1	0	0	1	1	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	BDL LEVEL UP
RCKSK0410442	0	1	0	1	1	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	BDL LEVEL DOWN
RCKSK0410443	1	1	0	1	1	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	BDR LEVEL UP
RCKSK0410444	0	0	1	1	1	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	BDR LEVEL DOWN
RCKSK0410445	1	0	1	1	1	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	Audyssey LFC ON
RCKSK0410446	0	1	1	1	1	1	0	1	1	0	*	*	*	*	*	*	*	*	*	*	Audyssey LFC OFF
RCKSK0410456	0	0	0	1	0	0	1	1	1	0	*	*	*	*	*	*	*	*	*	*	Audyssey LFC ON/OFF
RCKSK0410522	0	1	0	1	0	0	0	0	0	1	*	*	*	*	*	*	*	*	*	*	FRONT SPEAKER
RCKSK0410542	0	1	1	1	1	0	0	0	0	1	*	*	*	*	*	*	*	*	*	*	DYNAMIC VOLUME OFF
RCKSK0410545	1	0	0	0	0	1	0	0	0	1	*	*	*	*	*	*	*	*	*	*	DYNAMIC VOLUME SELECT
RCKSK0410547	1	1	0	0	0	1	0	0	0	1	*	*	*	*	*	*	*	*	*	*	DYNAMIC EQ SELECT
RCKSK0410548	0	0	1	0	0	1	0	0	0	1	*	*	*	*	*	*	*	*	*	*	AUDIO RESTORER SELECT
RCKSK0410549	1	0	1	0	0	1	0	0	0	1	*	*	*	*	*	*	*	*	*	*	DYNAMIC EQ/VOLUME SELECT
RCKSK0410556	0	0	1	1	0	1	0	0	0	1	*	*	*	*	*	*	*	*	*	*	RESTORER(OFF)
RCKSK0410557	1	0	1	1	0	1	0	0	0	1	*	*	*	*	*	*	*	*	*	*	RESTORER(High)
RCKSK0410558	0	1	1	1	0	1	0	0	0	1	*	*	*	*	*	*	*	*	*	*	RESTORER(Medium)
RCKSK0410559	1	1	1	1	0	1	0	0	0	1	*	*	*	*	*	*	*	*	*	*	RESTORER(Low)
RCKSK0410605	1	0	1	1	1	0	1	0	0	1	*	*	*	*	*	*	*	*	*	*	FRONT SP A ON/OFF
RCKSK0410606	0	1	1	1	1	0	1	0	0	1	*	*	*	*	*	*	*	*	*	*	FRONT SP B ON/OFF
RCKSK0410620	0	0	1	1	0	1	1	0	0	1	*	*	*	*	*	*	*	*	*	*	AUDIO DELAY MODE
RCKSK0410621	1	0	1	1	0	1	1	0	0	1	*	*	*	*	*	*	*	*	*	*	AUDIO DELAY UP

RCKSK0410622	0	1	1	1	0	1	1	0	0	1	*	*	*	*	*	*	*	*	*	*	AUDIO DELAY DOWN
RCKSK0410624	0	0	0	0	1	1	1	0	0	1	*	*	*	*	*	*	*	*	*	*	INFO
RCKSK0410640	0	0	0	0	0	0	0	1	0	1	*	*	*	*	*	*	*	*	*	*	FLD STATUS
RCKSK0410649	1	0	0	1	0	0	0	1	0	1	*	*	*	*	*	*	*	*	*	*	FHL LEVEL UP
RCKSK0410650	0	1	0	1	0	0	0	1	0	1	*	*	*	*	*	*	*	*	*	*	FHL LEVEL DOWN
RCKSK0410651	1	1	0	1	0	0	0	1	0	1	*	*	*	*	*	*	*	*	*	*	FHR LEVEL UP
RCKSK0410652	0	0	1	1	0	0	0	1	0	1	*	*	*	*	*	*	*	*	*	*	FHR LEVEL DOWN
RCKSK0410656	0	0	0	0	1	0	0	1	0	1	*	*	*	*	*	*	*	*	*	*	Front Display(Dimmer)
RCKSK0410669	1	0	1	1	1	0	0	1	0	1	*	*	*	*	*	*	*	*	*	*	HDMI Monitor Select 1
RCKSK0410670	0	1	1	1	1	0	0	1	0	1	*	*	*	*	*	*	*	*	*	*	HDMI Monitor Select 2
RCKSK0410671	1	1	1	1	1	0	0	1	0	1	*	*	*	*	*	*	*	*	*	*	HDMI Monitor Select Auto(Dual)
RCKSK0410691	1	1	0	0	1	1	0	1	0	1	*	*	*	*	*	*	*	*	*	*	Internet Radio
RCKSK0410698	0	1	0	1	1	1	0	1	0	1	*	*	*	*	*	*	*	*	*	*	CD / PHONO
RCKSK0410699	1	1	0	1	1	1	0	1	0	1	*	*	*	*	*	*	*	*	*	*	Media Server
RCKSK0410704	0	0	0	0	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	PHONO
RCKSK0410705	1	0	0	0	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	TUNER
RCKSK0410706	0	1	0	0	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	CD
RCKSK0410711	1	1	1	0	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	HEOS MUSIC
RCKSK0410715	1	1	0	1	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	TUNER
RCKSK0410716	0	0	1	1	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	HEOS MUSIC
RCKSK0410718	0	1	1	1	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	USB
RCKSK0410719	1	1	1	1	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	TUNER
RCKSK0410720	0	0	0	0	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	DVD
RCKSK0410721	1	0	0	0	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	Blu-ray
RCKSK0410722	0	1	0	0	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	TV AUDIO
RCKSK0410723	1	1	0	0	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	CBL/SAT
RCKSK0410725	1	0	1	0	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	GAME
RCKSK0410726	0	1	1	0	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	MEDIA PLAYER
RCKSK0410729	1	0	0	1	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	AUX1
RCKSK0410730	0	1	0	1	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	AUX2
RCKSK0410732	0	0	1	1	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	DVD/Blu-ray
RCKSK0410735	1	1	1	1	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	MEDIA PLAYER
RCKSK0410736	0	0	0	0	0	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	MultiEQ XT32
RCKSK0410741	1	0	1	0	0	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	INTERNET RADIO(Recent Play)
RCKSK0410746	0	1	0	1	0	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	DYNAMIC EQ ON
RCKSK0410747	1	1	0	1	0	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	DYNAMIC EQ OFF
RCKSK0410748	0	0	1	1	0	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	DYNAMIC VOLUME(Heavy)
RCKSK0410749	1	0	1	1	0	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	DYNAMIC VOLUME(Medium)
RCKSK0410750	0	1	1	1	0	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	DYNAMIC VOLUME(Light)
RCKSK0410751	1	1	1	1	0	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	Bluetooth
RCKSK0410752	0	0	0	0	1	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	RESOLUTION

RCKSK0410753	1	0	0	0	1	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	Monitor Select
RCKSK0410754	0	1	0	0	1	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	RESOLUTION(HDMI)
RCKSK0410757	1	0	1	0	1	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ASPECT(16:9)
RCKSK0410758	0	1	1	0	1	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ASPECT(4:3)
RCKSK0410760	0	0	0	1	1	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	Reference Level Offset (0dB) for Dynamic EQ
RCKSK0410761	1	0	0	1	1	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	Reference Level Offset (5dB) for Dynamic EQ
RCKSK0410762	0	1	0	1	1	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	Reference Level Offset (10dB) for Dynamic EQ
RCKSK0410763	1	1	0	1	1	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	Reference Level Offset (15dB) for Dynamic EQ
RCKSK0410787	1	1	0	0	1	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	INPUT SOURCE SELECT Right
RCKSK0410788	0	0	1	0	1	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	INPUT SOURCE SELECT Left
RCKSK0410789	1	0	1	0	1	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	Graphic EQ (toggle)
RCKSK0410791	1	1	1	1	1	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	Graphic EQ ON
RCKSK0410792	0	0	0	1	1	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	Graphic EQ OFF
RCKSK0410822	0	1	1	0	1	1	0	0	1	1	*	*	*	*	*	*	*	*	*	*	All Zone Stereo ON
RCKSK0410823	1	1	1	0	1	1	0	0	1	1	*	*	*	*	*	*	*	*	*	*	All Zone Stereo OFF
RCKSK0410826	0	1	0	1	1	1	0	0	1	1	*	*	*	*	*	*	*	*	*	*	HDMI(CEC)Control ON
RCKSK0410827	1	1	0	1	1	1	0	0	1	1	*	*	*	*	*	*	*	*	*	*	HDMI(CEC)Control OFF
RCKSK0410829	1	0	1	1	1	1	0	0	1	1	*	*	*	*	*	*	*	*	*	*	HDMI Audio Out Select
RCKSK0410830	0	1	1	1	1	1	0	0	1	1	*	*	*	*	*	*	*	*	*	*	HDMI Audio Out TV
RCKSK0410831	1	1	1	1	1	1	0	0	1	1	*	*	*	*	*	*	*	*	*	*	HDMI Audio Out AMP
RCKSK0410834	0	1	0	0	0	0	1	0	1	1	*	*	*	*	*	*	*	*	*	*	All Zone Stereo ON/OFF
RCKSK0410836	0	0	1	0	0	0	1	0	1	1	*	*	*	*	*	*	*	*	*	*	SLEEP MODE
RCKSK0410849	1	0	0	0	1	0	1	0	1	1	*	*	*	*	*	*	*	*	*	*	Video Mode Select
RCKSK0410850	0	1	0	0	1	0	1	0	1	1	*	*	*	*	*	*	*	*	*	*	Video Mode Select Auto
RCKSK0410851	1	1	0	0	1	0	1	0	1	1	*	*	*	*	*	*	*	*	*	*	Video Mode Select Movie
RCKSK0410852	0	0	1	0	1	0	1	0	1	1	*	*	*	*	*	*	*	*	*	*	Video Mode Select Game
RCKSK0410854	0	1	1	0	1	0	1	0	1	1	*	*	*	*	*	*	*	*	*	*	Vertical Stretch ON
RCKSK0410855	1	1	1	0	1	0	1	0	1	1	*	*	*	*	*	*	*	*	*	*	Vertical Stretch OFF
RCKSK0410857	1	0	0	1	1	0	1	0	1	1	*	*	*	*	*	*	*	*	*	*	Loudness Management ON/OFF
RCKSK0410861	1	0	1	1	1	0	1	0	1	1	*	*	*	*	*	*	*	*	*	*	Bass Sync Up
RCKSK0410862	0	1	1	1	1	0	1	0	1	1	*	*	*	*	*	*	*	*	*	*	Bass Sync Down
RCKSK0410872	0	0	0	1	0	1	1	0	1	1	*	*	*	*	*	*	*	*	*	*	ECO MODE(toggle)
RCKSK0410873	1	0	0	1	0	1	1	0	1	1	*	*	*	*	*	*	*	*	*	*	ECO MODE(OFF)
RCKSK0410874	0	1	0	1	0	1	1	0	1	1	*	*	*	*	*	*	*	*	*	*	ECO MODE(ON)
RCKSK0410875	1	1	0	1	0	1	1	0	1	1	*	*	*	*	*	*	*	*	*	*	ECO MODE(AUTO)
RCKSK0410896	0	0	0	0	0	0	0	1	1	1	*	*	*	*	*	*	*	*	*	*	SHL LEVEL UP
RCKSK0410897	1	0	0	0	0	0	0	1	1	1	*	*	*	*	*	*	*	*	*	*	SHL LEVEL DOWN
RCKSK0410898	0	1	0	0	0	0	0	1	1	1	*	*	*	*	*	*	*	*	*	*	SHR LEVEL UP

RCKSK0410899	1	1	0	0	0	0	0	1	1	1	*	*	*	*	*	*	*	*	*	*	SHR LEVEL DOWN
RCKSK0410900	0	0	1	0	0	0	0	1	1	1	*	*	*	*	*	*	*	*	*	*	TS LEVEL UP
RCKSK0410901	1	0	1	0	0	0	0	1	1	1	*	*	*	*	*	*	*	*	*	*	TS LEVEL DOWN
RCKSK0410902	0	1	1	0	0	0	0	1	1	1	*	*	*	*	*	*	*	*	*	*	CH (Center Height) LEVEL UP
RCKSK0410903	1	1	1	0	0	0	0	1	1	1	*	*	*	*	*	*	*	*	*	*	CH (Center Height) LEVEL DOWN
RCKSK0410949	1	0	1	0	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	OPTION
RCKSK0410950	0	1	1	0	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	PAGE Previous
RCKSK0410951	1	1	1	0	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	PAGE Next
RCKSK0410956	0	0	1	1	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE REPEAT
RCKSK0410957	1	0	1	1	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE RANDOM/SHUFFLE
RCKSK0410958	0	1	1	1	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE USB DIRECT PLAY
RCKSK0410959	1	1	1	1	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE FAVORITE DIRECT PLAY
RCKSK0410970	0	1	0	1	0	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE TUNING UP ※NA only
RCKSK0410971	1	1	0	1	0	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE TUNING DOWN ※NA only
RCKSK0410972	0	0	1	1	0	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE PRESET CH UP ※NA only
RCKSK0410973	1	0	1	1	0	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE PRESET CH DOWN ※NA only
RCKSK0410976	0	0	0	0	1	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE Rewind
RCKSK0410977	1	0	0	0	1	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE BAND FM ※NA only
RCKSK0410978	0	1	0	0	1	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE BAND AM ※NA only
RCKSK0410979	1	1	0	0	1	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE Fast Forward
RCKSK0410983	1	1	1	0	1	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE SEARH ※NA only
RCKSK0410992	0	0	0	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE PLAY/PAUSE
RCKSK0410993	1	0	0	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE STOP
RCKSK0410994	0	1	0	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE PAUSE
RCKSK0410995	1	1	0	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE SKIP MINUS/ TUNING DOWN
RCKSK0410996	0	0	1	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE SKIP PLUS/TUNING UP
RCKSK0410997	1	0	1	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE TUNING ▼ ※NA only
RCKSK0410998	0	1	1	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	MAIN ZONE TUNING ▲ ※NA only

ZONE2

REMOTE ID SET: 1

DENON CODE																Parity				GENRE1				GENRE2			
4				5				2				3				0				4				3			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	0	0	1	0	1	1	0	0

REMOTE ID SET: 2-4

DENON CODE																Parity				GENRE1				GENRE2			
4				5				2				3				0				4				4			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	0	0	1	0	0	0	1	0

No.	Data										ID		parity								Key Name
	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	
RCKSK0430005	1	0	1	0	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 POWER ON/OFF
RCKSK0430006	0	1	1	0	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 POWER ON
RCKSK0430007	1	1	1	0	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 POWER OFF
RCKSK0430016	0	0	0	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 KEY1
RCKSK0430017	1	0	0	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 KEY2
RCKSK0430018	0	1	0	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 KEY3
RCKSK0430019	1	1	0	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 KEY4
RCKSK0430020	0	0	1	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 KEY5
RCKSK0430021	1	0	1	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 KEY6
RCKSK0430022	0	1	1	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 KEY7
RCKSK0430023	1	1	1	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 KEY8
RCKSK0430024	0	0	0	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 KEY9
RCKSK0430025	1	0	0	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 KEY0
RCKSK0430027	1	1	0	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 CURSOR UP
RCKSK0430028	0	0	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 CURSOR DOWN
RCKSK0430029	1	0	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 CURSOR LEFT
RCKSK0430030	0	1	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 CURSOR RIGHT
RCKSK0430031	1	1	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 ENTER
RCKSK0430034	0	1	0	0	0	1	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 RETURN
RCKSK0430036	0	0	1	0	0	1	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 MEMORY
RCKSK0430223	1	1	1	1	1	0	1	1	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 AUX3 (Additional Source)
RCKSK0430224	0	0	0	0	0	1	1	1	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 AUX4 (Additional Source)
RCKSK0430225	1	0	0	0	0	1	1	1	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 AUX5 (Additional Source)

RCKSK0430226	0	1	0	0	0	1	1	1	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 AUX6 (Additional Source)
RCKSK0430227	1	1	0	0	0	1	1	1	0	0	*	*	*	*	*	*	*	*	*	*	ZONE2 AUX7 (Additional Source)
RCKSK0430292	0	0	1	0	0	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE2 QUICK SELECT 1
RCKSK0430293	1	0	1	0	0	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE2 QUICK SELECT 2
RCKSK0430294	0	1	1	0	0	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE2 QUICK SELECT 3
RCKSK0430295	1	1	1	0	0	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE2 QUICK SELECT 4
RCKSK0430296	0	0	0	1	0	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE2 QUICK SELECT 5
RCKSK0430368	0	0	0	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE2 VOLUME UP
RCKSK0430369	1	0	0	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE2 VOLUME DOWN
RCKSK0430370	0	1	0	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE2 VOLUME MUTE
RCKSK0430370	1	1	0	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE2 VR PRESET(MUTE)
RCKSK0430372	0	0	1	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE2 VR PRESET1(0dB)
RCKSK0430373	1	0	1	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE2 VR PRESET2(-20dB)
RCKSK0430374	0	1	1	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE2 VR PRESET3(-40dB)
RCKSK0430691	1	1	0	0	1	1	0	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 Internet Radio
RCKSK0430692	0	0	1	0	1	1	0	1	0	1	*	*	*	*	*	*	*	*	*	*	Main Zone Source CALL
RCKSK0430698	0	1	0	1	1	1	0	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 CD / PHONO
RCKSK0430699	1	1	0	1	1	1	0	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 Media Server
RCKSK0430704	0	0	0	0	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 PHONO
RCKSK0430705	1	0	0	0	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 TUNER
RCKSK0430706	0	1	0	0	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 CD
RCKSK0430711	1	1	1	0	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 HEOS MUSIC
RCKSK0430715	1	1	0	1	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 TUNER
RCKSK0430716	0	0	1	1	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 HEOS MUSIC
RCKSK0430718	0	1	1	1	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 USB
RCKSK0430719	1	1	1	1	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 TUNER
RCKSK0430720	0	0	0	0	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 DVD
RCKSK0430721	1	0	0	0	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 Blu-ray
RCKSK0430722	0	1	0	0	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 TV AUDIO
RCKSK0430723	1	1	0	0	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 CBL/SAT
RCKSK0430725	1	0	1	0	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 GAME
RCKSK0430726	0	1	1	0	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 MEDIA PLAYER
RCKSK0430729	1	0	0	1	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 AUX1
RCKSK0430730	0	1	0	1	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 AUX2
RCKSK0430732	0	0	1	1	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 DVD/Blu-ray
RCKSK0430735	1	1	1	1	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 MEDIA PLAYER
RCKSK0430741	1	0	1	0	0	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 INTERNET RADIO(Recent Play)
RCKSK0430751	1	1	1	1	0	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE2 Bluetooth
RCKSK0430787	1	1	0	0	1	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 INPUT SOURCE SELECT Right
RCKSK0430788	0	0	1	0	1	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 INPUT SOURCE SELECT Left
RCKSK0430788	0	0	1	0	0	0	1	0	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 SLEEP

RCKSK0430950	0	1	1	0	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 PAGE Previous
RCKSK0430951	1	1	1	0	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 PAGE Next
RCKSK0430956	0	0	1	1	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 REPEAT
RCKSK0430957	1	0	1	1	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 RANDOM/SHUFFLE
RCKSK0430958	0	1	1	1	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 USB DIRECT PLAY
RCKSK0430959	1	1	1	1	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 FAVORITE DIRECT PLAY
RCKSK0430970	0	1	0	1	0	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 TUNING UP ※NA only
RCKSK0430971	1	1	0	1	0	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 TUNING DOWN ※NA only
RCKSK0430972	0	0	1	1	0	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 PRESET CH UP ※NA only
RCKSK0430973	1	0	1	1	0	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 PRESET CH DOWN ※NA only
RCKSK0430976	0	0	0	0	1	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 Rewind
RCKSK0430977	1	0	0	0	1	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 BAND FM ※NA only
RCKSK0430978	0	1	0	0	1	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 BAND AM ※NA only
RCKSK0430979	1	1	0	0	1	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 Fast Foward
RCKSK0430983	1	1	1	0	1	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 SEARCH ※NA only
RCKSK0430992	0	0	0	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 PLAY/PAUSE
RCKSK0430993	1	0	0	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 STOP
RCKSK0430994	0	1	0	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 PAUSE
RCKSK0430995	1	1	0	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 SKIP MINUS/TUNING DOWN
RCKSK0430996	0	0	1	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 SKIP PLUS/TUNING UP
RCKSK0430997	1	0	1	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 TUNING ▼ ※NA only
RCKSK0430998	0	1	1	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE2 TUNING ▲ ※NA only

ZONE3

REMOTE ID SET: 1

DENON CODE																Parity				GENRE1				GENRE2			
4				5				2				3				0				4				5			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	0	0	1	0	1	1	0	0

REMOTE ID SET: 2-4

DENON CODE																Parity				GENRE1				GENRE2			
4				5				2				3				0				4				6			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	0	0	1	0	0	0	1	0

No.	Data										ID		parity								Key Name
	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	
RCKSK0450005	1	0	1	0	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 POWER ON/OFF
RCKSK0450006	0	1	1	0	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 POWER ON
RCKSK0450007	1	1	1	0	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 POWER OFF
RCKSK0450016	0	0	0	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 KEY1
RCKSK0450017	1	0	0	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 KEY2
RCKSK0450018	0	1	0	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 KEY3
RCKSK0450019	1	1	0	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 KEY4
RCKSK0450020	0	0	1	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 KEY5
RCKSK0450021	1	0	1	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 KEY6
RCKSK0450022	0	1	1	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 KEY7
RCKSK0450023	1	1	1	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 KEY8
RCKSK0450024	0	0	0	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 KEY9
RCKSK0450025	1	0	0	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 KEY0
RCKSK0450027	1	1	0	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 CURSOR UP
RCKSK0450028	0	0	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 CURSOR DOWN
RCKSK0450029	1	0	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 CURSOR LEFT
RCKSK0450030	0	1	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 CURSOR RIGHT
RCKSK0450031	1	1	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 ENTER
RCKSK0450034	0	1	0	0	0	1	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 RETURN
RCKSK0450036	0	0	1	0	0	1	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 MEMORY
RCKSK0450223	1	1	1	1	1	0	1	1	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 AUX3 (Additional Source)
RCKSK0450224	0	0	0	0	0	1	1	1	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 AUX4 (Additional Source)
RCKSK0450225	1	0	0	0	0	1	1	1	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 AUX5 (Additional Source)

RCKSK0450226	0	1	0	0	0	1	1	1	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 AUX6 (Additional Source)
RCKSK0450227	1	1	0	0	0	1	1	1	0	0	*	*	*	*	*	*	*	*	*	*	ZONE3 AUX7 (Additional Source)
RCKSK0450292	0	0	1	0	0	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE3 QUICK SELECT 1
RCKSK0450293	1	0	1	0	0	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE3 QUICK SELECT 2
RCKSK0450294	0	1	1	0	0	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE3 QUICK SELECT 3
RCKSK0450295	1	1	1	0	0	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE3 QUICK SELECT 4
RCKSK0450296	0	0	0	1	0	1	0	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE3 QUICK SELECT 5
RCKSK0450368	0	0	0	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE3 VOLUME UP
RCKSK0450369	1	0	0	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE3 VOLUME DOWN
RCKSK0450370	0	1	0	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE3 VOLUME MUTE
RCKSK0450370	1	1	0	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE3 VR MUTE
RCKSK0450372	0	0	1	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE3 VR PRESET1(0dB)
RCKSK0450373	1	0	1	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE3 VR PRESET2(-20dB)
RCKSK0450374	0	1	1	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	*	*	ZONE3 VR PRESET3(-40dB)
RCKSK0450691	1	1	0	0	1	1	0	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 Internet Radio
RCKSK0450692	0	0	1	0	1	1	0	1	0	1	*	*	*	*	*	*	*	*	*	*	Main Zone Source CALL
RCKSK0450698	0	1	0	1	1	1	0	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 CD / PHONO
RCKSK0450699	1	1	0	1	1	1	0	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 Media Server
RCKSK0450704	0	0	0	0	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 PHONO
RCKSK0450705	1	0	0	0	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 TUNER
RCKSK0450706	0	1	0	0	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 CD
RCKSK0450711	1	1	1	0	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 HEOS MUSIC
RCKSK0450715	1	1	0	1	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 TUNER
RCKSK0450716	0	0	1	1	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 HEOS MUSIC
RCKSK0450718	0	1	1	1	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 USB
RCKSK0450719	1	1	1	1	0	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 TUNER
RCKSK0450720	0	0	0	0	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 DVD
RCKSK0450721	1	0	0	0	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 Blu-ray
RCKSK0450722	0	1	0	0	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 TV AUDIO
RCKSK0450723	1	1	0	0	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 CBL/SAT
RCKSK0450725	1	0	1	0	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 GAME
RCKSK0450726	0	1	1	0	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 MEDIA PLAYER
RCKSK0450729	1	0	0	1	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 AUX1
RCKSK0450730	0	1	0	1	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 AUX2
RCKSK0450732	0	0	1	1	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 DVD/Blu-ray
RCKSK0450735	1	1	1	1	1	0	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 MEDIA PLAYER
RCKSK0450741	1	0	1	0	0	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 INTERNET RADIO(Recent Play)
RCKSK0450751	1	1	1	1	0	1	1	1	0	1	*	*	*	*	*	*	*	*	*	*	ZONE3 Bluetooth
RCKSK0450787	1	1	0	0	1	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 INPUT SOURCE SELECT Right
RCKSK0450788	0	0	1	0	1	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 INPUT SOURCE SELECT Left
RCKSK0450788	0	0	1	0	0	0	1	0	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 SLEEP

RCKSK0450950	0	1	1	0	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 PAGE Previous
RCKSK0450951	1	1	1	0	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 PAGE Next
RCKSK0450956	0	0	1	1	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 REPEAT
RCKSK0450957	1	0	1	1	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 RANDOM/SHUFFLE
RCKSK0450958	0	1	1	1	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 USB DIRECT PLAY
RCKSK0450959	1	1	1	1	1	1	0	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 FAVORITE DIRECT PLAY
RCKSK0450970	0	1	0	1	0	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 TUNING UP ※NA only
RCKSK0450971	1	1	0	1	0	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 TUNING DOWN ※NA only
RCKSK0450972	0	0	1	1	0	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 PRESET CH UP ※NA only
RCKSK0450973	1	0	1	1	0	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 PRESET CH DOWN ※NA only
RCKSK0450976	0	0	0	0	1	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 Rewind
RCKSK0450977	1	0	0	0	1	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 BAND FM ※NA only
RCKSK0450978	0	1	0	0	1	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 BAND AM ※NA only
RCKSK0450979	1	1	0	0	1	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 Fast Forward
RCKSK0450983	1	1	1	0	1	0	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 SEARCH ※NA only
RCKSK0450992	0	0	0	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 PLAY/PAUSE
RCKSK0450993	1	0	0	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 STOP
RCKSK0450994	0	1	0	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 PAUSE
RCKSK0450995	1	1	0	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 SKIP MINUS/TUNING DOWN
RCKSK0450996	0	0	1	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 SKIP PLUS/TUNING UP
RCKSK0450997	1	0	1	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 TUNING ▼ ※NA only
RCKSK0450998	0	1	1	0	0	1	1	1	1	1	*	*	*	*	*	*	*	*	*	*	ZONE3 TUNING ▲ ※NA only

ANALOG TUNER ※NA only

REMOTE ID SET: 1

DENON CODE																Parity				GENRE1				GENRE2			
4				5				2				3				0				4				1			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	0	0	1	0	1	0	0	0

REMOTE ID SET: 2-4

DENON CODE																Parity				GENRE1				GENRE2			
4				5				2				3				0				4				2			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	0	0	1	0	0	1	0	0

No.	Data										ID		parity								Key Name
	2	3	3	3	3	3	3	3	3	3	3	4	4	4	4	4	4	4	4	4	
	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	
RCKSK0410144	0	0	0	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	TUNING UP
RCKSK0410145	1	0	0	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	TUNING DOWN
RCKSK0410146	0	1	0	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	PRESET CH UP
RCKSK0410147	1	1	0	0	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	PRESET CH DOWN
RCKSK0410152	0	0	0	1	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	BAND FM/AM
RCKSK0410153	1	0	0	1	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	BAND FM
RCKSK0410154	0	1	0	1	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	BAND AM
RCKSK0410156	0	0	1	1	1	0	0	1	0	0	*	*	*	*	*	*	*	*	*	*	MODE AUTO/MANUAL
RCKSK0410160	0	0	0	0	0	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	MEMORY
RCKSK0410163	1	1	0	0	0	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	SEARCH
RCKSK0410166	0	1	1	0	0	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	RT (EU only)
RCKSK0410169	1	0	0	1	0	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	PTY(EU only)
RCKSK0410170	0	1	0	1	0	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	CURSOR UP(TUNER)
RCKSK0410171	1	1	0	1	0	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	CURSOR DOWN(TUNER)
RCKSK0410173	1	0	1	1	0	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	CURSOR LEFT(TUNER)
RCKSK0410174	0	1	1	1	0	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	CURSOR RIGHT(TUNER)
RCKSK0410175	1	1	1	1	0	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	CURSOR ENTER(TUNER)
RCKSK0410176	0	0	0	0	1	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	PRESET 1 / Numeric 1
RCKSK0410177	1	0	0	0	1	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	PRESET 2 / Numeric 2
RCKSK0410178	0	1	0	0	1	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	PRESET 3 / Numeric 3
RCKSK0410179	1	1	0	0	1	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	PRESET 4 / Numeric 4
RCKSK0410180	0	0	1	0	1	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	PRESET 5 / Numeric 5

RCKSK0410181	1	0	1	0	1	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	PRESET 6 / Numeric 6
RCKSK0410182	0	1	1	0	1	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	PRESET 7 / Numeric 7
RCKSK0410183	1	1	1	0	1	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	PRESET 8 / Numeric 8
RCKSK0410184	0	0	0	1	1	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	Numeric 9
RCKSK0410185	1	0	0	1	1	1	0	1	0	0	*	*	*	*	*	*	*	*	*	*	Numeric 0
RCKSK0410241	1	0	0	0	1	1	1	1	0	0	*	*	*	*	*	*	*	*	*	*	RETURN(TUNER)

HEOS MUSIC

REMOTE ID SET: 1

DENON CODE																Parity				GENRE1				GENRE2			
4				5				2				3				0				4				7			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	0	0	1	0	1	1	1	0

REMOTE ID SET: 2-4

DENON CODE																Parity				GENRE1				GENRE2			
4				5				2				3				0				4				8			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	0	0	1	0	0	0	0	1

No.	Data										ID		parity								Key Name
	2	3	3	3	3	3	3	3	3	3	3	4	4	4	4	4	4	4	4	4	
	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	
RCKSK0470027	1	1	0	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	CURSOR UP
RCKSK0470028	0	0	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	CURSOR DOWN
RCKSK0470029	1	0	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	CURSOR LEFT
RCKSK0470030	0	1	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	CURSOR RIGHT
RCKSK0470031	1	1	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	ENTER
RCKSK0470034	0	1	0	0	0	1	0	0	0	0	*	*	*	*	*	*	*	*	*	*	RETURN
RCKSK0470773	1	0	1	0	0	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	PLAY
RCKSK0470774	0	1	1	0	0	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	PAUSE
RCKSK0470775	1	1	1	0	0	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	STOP
RCKSK0470776	0	0	0	1	0	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	SKIP PLUS
RCKSK0470777	1	0	0	1	0	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	SKIP MINUS
RCKSK0470778	0	1	0	1	0	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	REPEAT ONE
RCKSK0470779	1	1	0	1	0	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	REPEAT OFF
RCKSK0470780	0	0	1	1	0	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	RANDOM ON
RCKSK0470781	1	0	1	1	0	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	RANDOM OFF
RCKSK0470785	1	0	0	0	1	0	0	0	1	1	*	*	*	*	*	*	*	*	*	*	REPEAT ALL